
### MVC S40-C4-000

#### **Minimum Requirements**


- A display connected to MCore Pro (not included).
- A Microsoft Teams Rooms or Skype<sup>®</sup> for Business account (not included).
- Wired network environment (not included).

### Package Contents

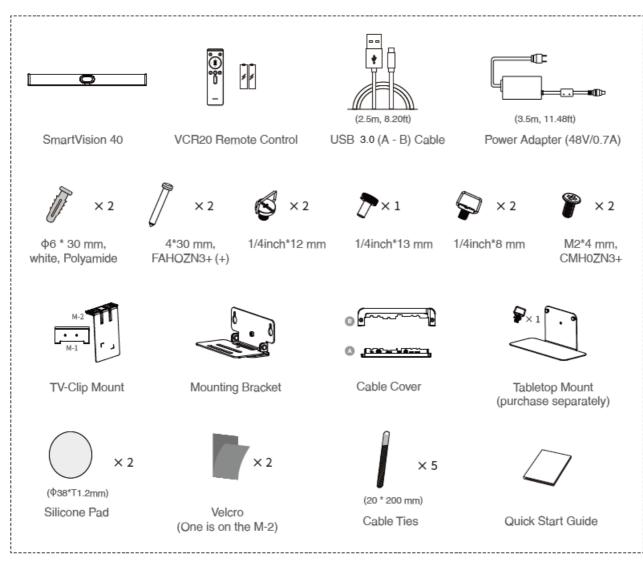

### **SmartVision 40 Package**

# Yealink

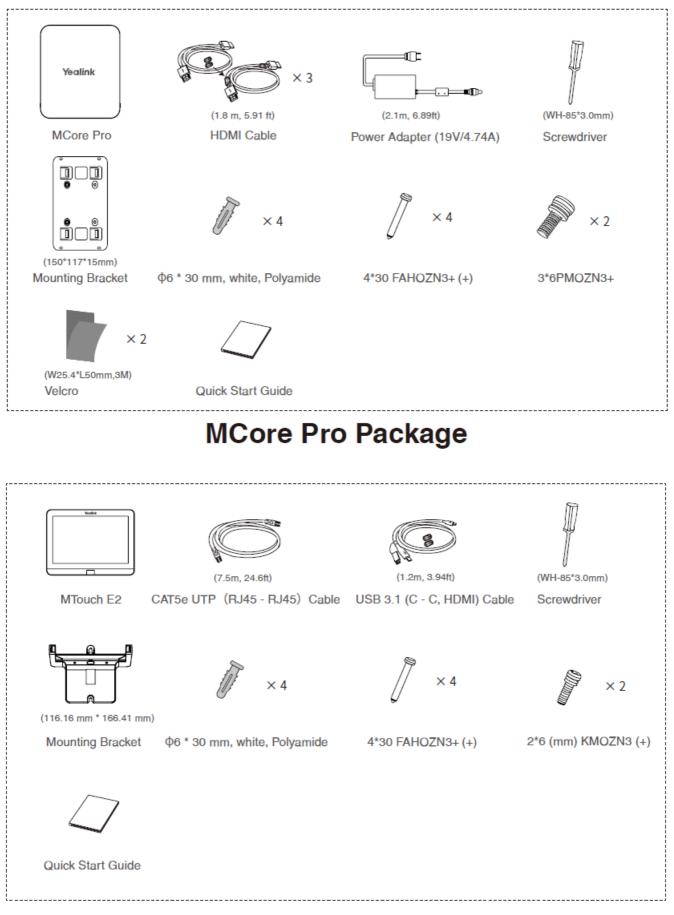


### **MTouch E2 Package**

### Install MVC S40-C4-000

- MCore Pro supports: mount on the wall, mount on the TV, stick to the table.
- MTouch E2 supports: put on a table, mount on a wall.
- SmartVision40 supports: put on a flat surface, mount on the wall, embed in the wall, mount on the Tabletop Mount, and mount on the Tabletop Mount.
- Install and deploy the accessories in the system according to the environment and actual needs. For how to install and deploy, please refer to the quick start guide for each product.

#### Connect MVC S40-C4-000

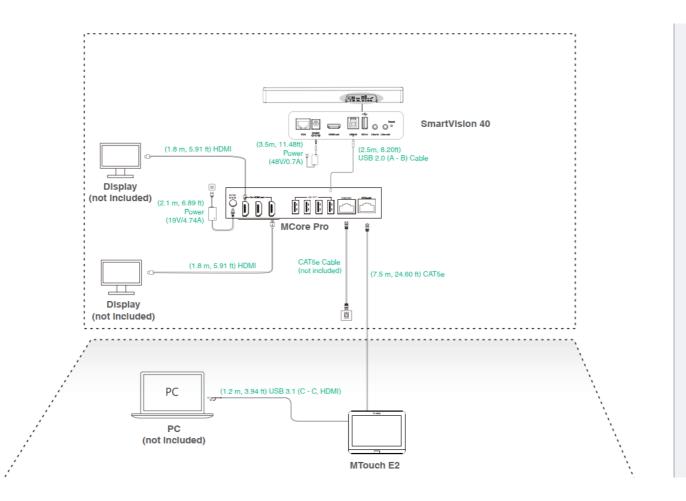

## Yealink

### (i) NOTE

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- The maximum cable connection distance from MCore Pro to the MTouch Plus/E2 is 40m/131ft and can not be extended further.
- Not included accessories requirements:
  - $\circ~$  Display: Resolution of 1080p or higher and with an HDMI port.
  - PC: Equipped with HDMI or USB-C (support DP protocol) Port.
  - Ethernet cable: CAT5e or higher ethernet cable.
  - HDMI: Standard HDMI cable.
  - PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.
- USB-C Cable with DisplayPort standard is recommended for MTouch Plus/E2 content share cables, original content share cable in MVC kits can also be purchased separately.

### **Initial Setup**

1. Press the power button on the bottom left of MCore Pro and the Microsoft Windows 11 IoT Enterprise Edition operating system will be automatically loaded after starting MCore Pro.

### (i) NOTE

When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit. After the system is initialized, you can use MTouch E2 to complete the system login and settings, and the device will automatically start the Microsoft Teams conference system application and enter the settings page.

- 2. Select the check box on the EULA page, and then tap Next.
- 3. Enter the account, the password on the **Account** page, and then tap **Next**. Supports Microsoft Teams Rooms or Skype<sup>®</sup> for Business accounts.
- 4. On the Advanced page, configure the domain and tap Next.
- 5. Tap **Finish** to complete the setup wizard.

### Features

### **Control SmartVision40 Camera Position**

1. Tap More > 🖤 to enter the Camera Control page.

### **Supported Accessories**

For the compatible devices and the maximum number of compatible devices, please refer to Teams Room Accessories Compatibility Lists.