


MVC S60-C5-000

For the installation video, please refer to MVCS60 Unboxing.

Requirements


- A display connected to MCore Pro (not included).
- A Microsoft Teams Rooms or Skype® for Business account (not included).
- Wired network environment (not included).

Package Contents

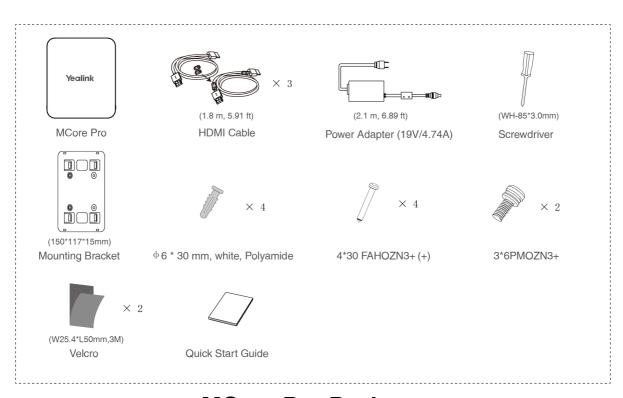


MCore Pro Package



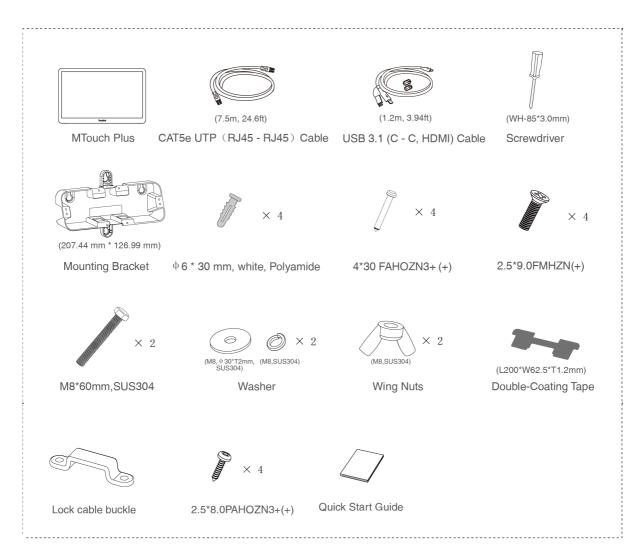


MTouch Plus Package



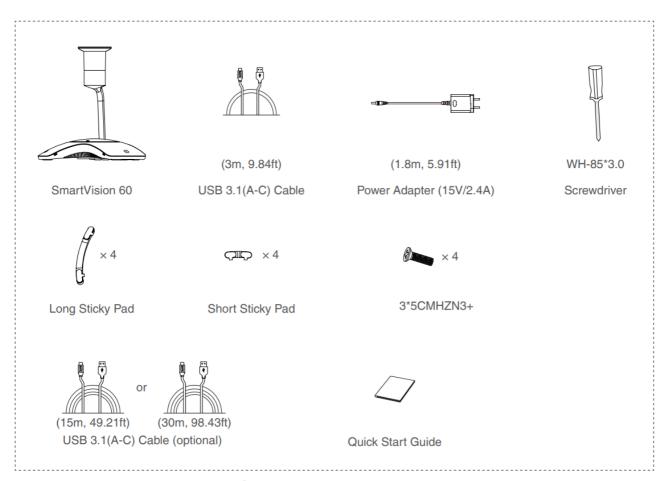

SmartVision 60

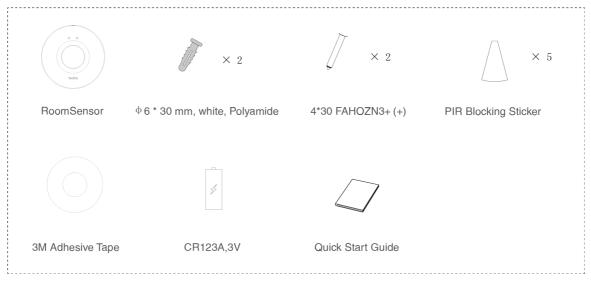


RoomSensor Package



Install MVC S60-C5-000

- MCore Pro supports: wall mounting, TV mounting, or placing on a table.
- MTouch Plus supports: placing on a table, sticking on a table, or wall mounting.
- SmartVision 60 supports: placing or sticking on a table.
- RoomSensor supports: ceiling or wall mounting.
- Install and deploy the accessories according to the environment and specific needs. For detailed installation and deployment instructions, please refer to the quick start guide for each product.

Connect MVC S60-C5-000

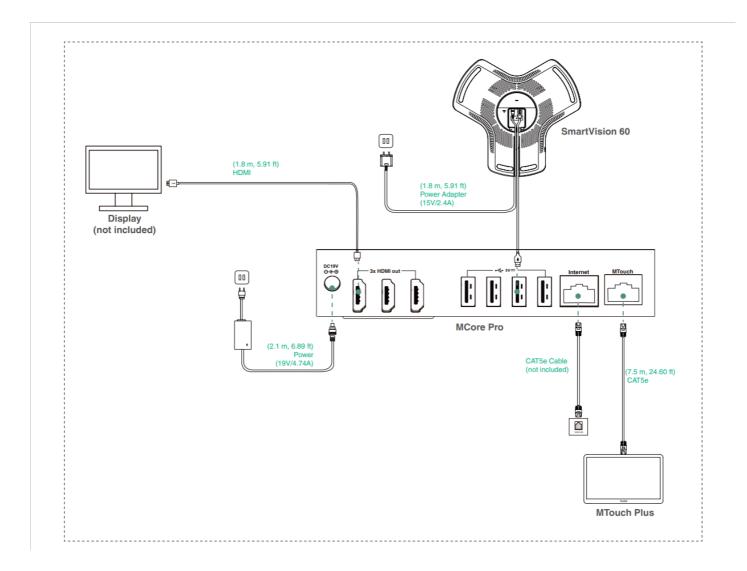



(i) NOTE

- When starting the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using a wireless mouse and keyboard kit.
- The maximum cable connection distance from MCore Pro to the MTouch Plus/E2 is 40m/131ft and cannot be extended.
- Not included accessories:
 - **Display**: Must have a resolution of 1080p or higher and an HDMI port.
 - **PC**: Must be equipped with an HDMI or USB-C port (supporting DP protocol).
 - Ethernet cable: CAT5e or higher.
 - HDMI cable: Standard HDMI cable.
 - **PoE switch**: Required if using PoE to connect speakers or cameras (PoE+ required).
- A USB-C cable with DisplayPort standard is recommended for MTouch Plus/E2 content sharing. The
 original content share cable in the MVC kits can also be purchased separately.

Supported Accessories

For the compatible devices and the maximum number of compatible devices, please refer to Teams Room Accessories Compatibility Lists.

Initial Setup

When the hardware deployment and connections are completed, you need to set up your Microsoft Teams Room System (MVC) system. Please refer to Quick Setup for more details.

Features

Pair with a RoomSensor/RoomSensor Pro

- 1. Switch the account from Skype to Admin.
- 2. Open Yealink RoomConnect Software.
- 3. Go to MTouch Plus > Device Status > Sensor.
- 4. Select **Add** and follow the on-screen instructions to pair.

(i) NOTE

- An MTouch Plus can be paired with only one RoomSensor/RoomSensor Pro.
- The distance between the MTouch Plus and RoomSensor/RoomSensor Pro must be within 20m.